


AWS


Architectural Wall Systems

PRODUCT DESCRIPTION


Sentrigard's Architectural Wall Systems,™ provide a horizontal concealed fastener wall panel system in multiple different profiles to suit many applications. Sentrigard's Architectural Wall System utilizes a unique profile that provides concealed fasteners and can be installed with or without clips to allow for expansion and contraction of the panel system.




16-4




16-3



16-1

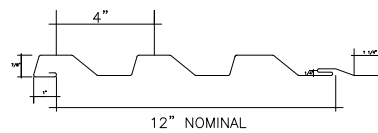

12-3



12-1



8-1

www.sentrigard.com



MANUFACTURER

- Sentrigard, 1000 Dillard Drive Forest, VA 24551
- **Telephone:** 877.495.7663
- **Email:** rts@sentrigard.com
- **Website:** Sentrigard.com

PRODUCT DESCRIPTION

Product:	Sentrigard® AWS Panel	
Air Infiltration:	ASTM E283	0.005 CFM/SF @ 20 psf
Water Penetration:	ASTM E331	No water leakage @ 25 psf
Structural Performance:	ASTM E330	24 ga steel - Maximum load- 112.3 PSF.
		032" alum. - Maximum Load- 61.6 PSF
Dynamic Water Test:	AAMA 501.1	No water leakage at 15 PSF.

PRODUCT DESCRIPTION**DESIGN INFORMATION**

- Min. 16 ga. Secondary Framing: Maximum – 4' on-center
- Field Curving: Minimum radius 200'
- Panel Length: Maximum - 40' with Clip Attachment
(Consult rts@nbhandy.com for longer panel lengths)
- Panel Width: 8", 12" & 16"

PRODUCT INSTALLATION

Sentrigard Architectural Wall Systems are types of roll-formed wall panels. With clip attachment, the wall panel system permits movement during thermal expansion and contraction, yet still retains complete securement. Screws attach panel clips to the substrate. Clip screws for architectural wall panels require a "pancake" head fastener. Therefore, to ensure compatibility, Sentriclad clips and screws as purchased through the NB Handy Company are required for all Sentrigard Architectural Wall Systems.

PROPER STORAGE:

If coil or panel material is not to be used immediately, it should be stored in a dry place where as little moisture as possible can affect it. Moisture (from rain, snow, condensation, etc.) trapped between pieces of material may cause water stains or white rust, store the material in a well ventilated, dry area. Break steel strapping bands used for shipment, and store the stacks of material in an inclined position with an insulator, such as wood. It is the responsibility of the Contractor-Manufacturer to ensure that all materials are properly stored at the jobsite.

PROPER HANDLING:

1. Panel crates and coils must be lifted at bundle block locations.
2. Do not lift material with ropes or wires.
3. Do not lift panels longer than 25' without a spreader bar.
4. Do not lift panels from end while flat. Do lift panels from the edge.
5. Lift panels on edge with one worker for each 10' throughout the length of the panel.

PROPER INSTALLATION:

Please review standard Sentrigard Installation Instructions for additional maintenance and care information of the new Sentrigard Architectural Wall System. Consult NB Handy Sentrigard Metal Roofing Systems Technical Department for approval of any installation procedures not specifically indicated in the Sentrigard Metal Roofing Systems printed specification, installation instructions, details, or approved shop drawings, etc.